


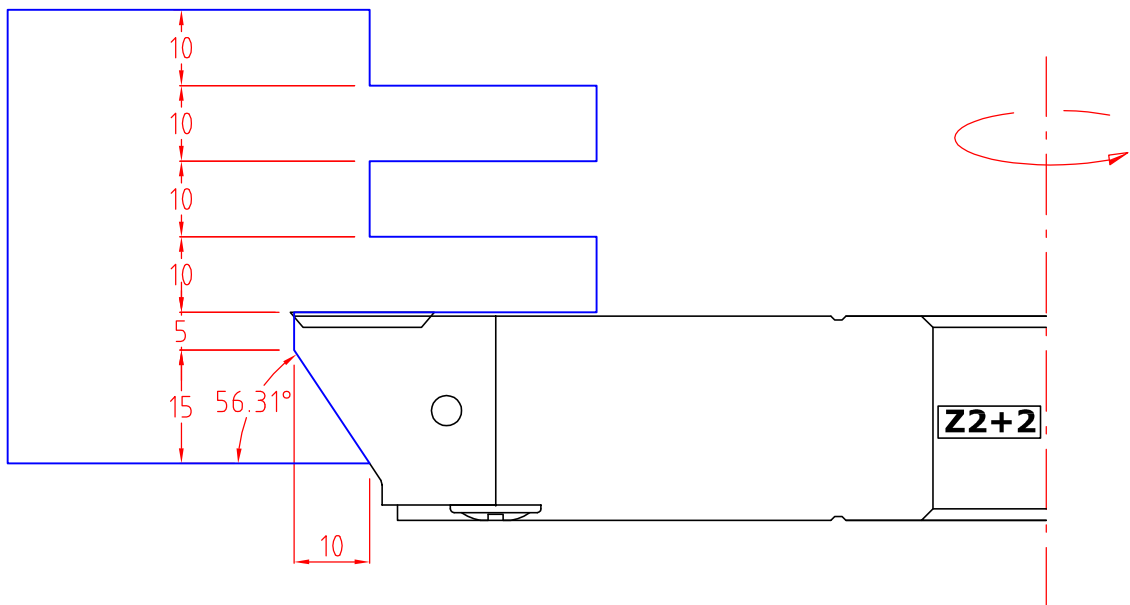

*SPECIAL ZERO SET TOOLING TO PRODUCE WINDOW OUTER FRAME AND SASH
FOR "SLIM-LINE" GLAZING ON A SPINDLE MOULDER*




CP TOOLING & MACHINERY LTD.
01748-897170
info@cptooling.co.uk
www.cptooling.co.uk





*SPECIAL ZERO SET TOOLING TO PRODUCE WINDOW OUTER FRAME AND SASH
FOR "SLIM-LINE" GLAZING ON A SPINDLE MOULDER*

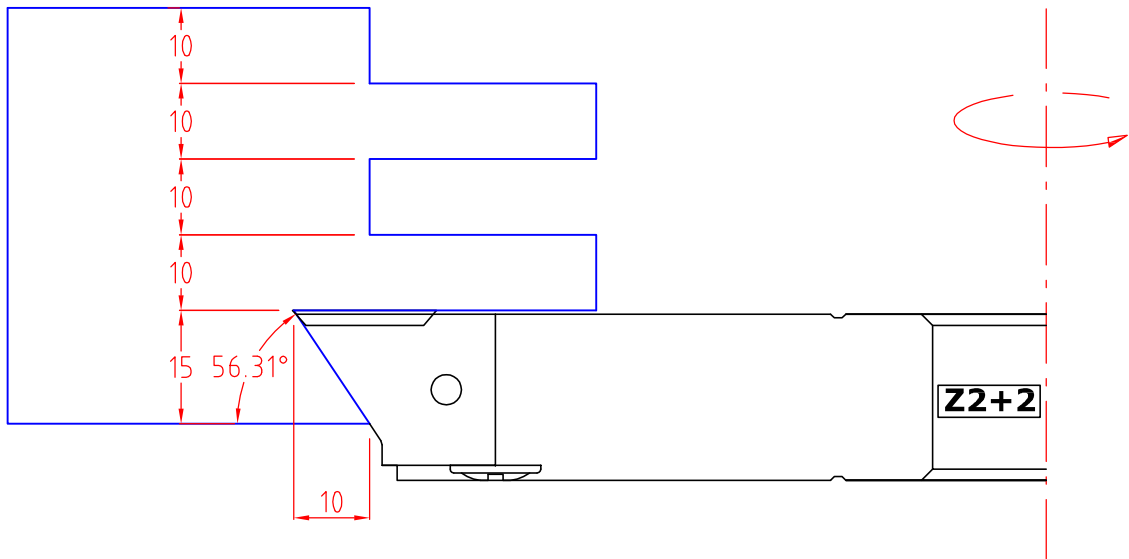


CP TOOLING & MACHINERY LTD.
01748-897170
info@cptooling.co.uk
www.cptooling.co.uk





*SPECIAL ZERO SET TOOLING TO PRODUCE WINDOW OUTER FRAME AND SASH
FOR "SLIM-LINE" GLAZING ON A SPINDLE MOULDER*

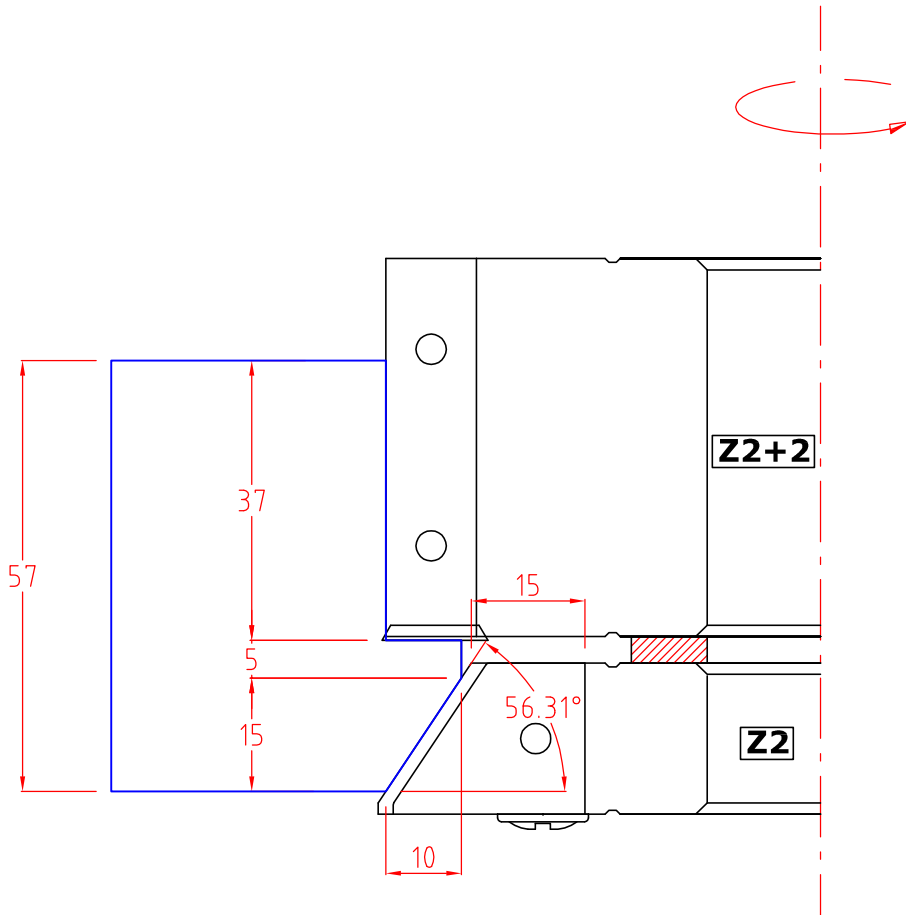

CP TOOLING & MACHINERY LTD.
01748-897170
info@cptooling.co.uk
www.cptooling.co.uk

