



How to finish your oak boards....


Sanding and Oiling

Ensure you have the correct PPE equipment when sanding timber and applying finishes.



Position your boards on a dry, flat, level surface. Start sanding the boards with an 80 grit sand paper, working with the grain of board and sanding until any debris or pencil marks are removed. Then move to 120 grit and finally 180 grit, brushing off any excess dust or debris prior to oiling.

To apply Osmo oil, ensure the wood surface is clean, dry, and sanded, then apply a thin, even coat with a brush, roller, or cloth, working with the wood grain, and remove excess with a clean cloth.

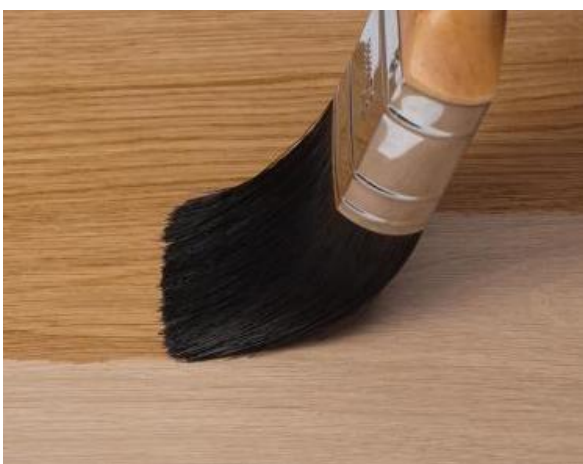

Allow to dry, then apply a second coat if needed, and ensure good ventilation during drying and curing.

